

Fig.5

Now insert the end of the cable so that the nipple sits in its place in the throttle slide, Fig.5

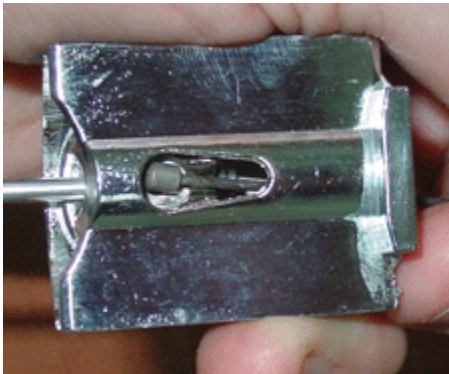


Fig.6

Fig.6 shows a close up of the throttle slide with the cable end in place but not yet with the white collar in position.

Insert slide into the throttle housing ensuring it is the correct way round. NOTE – there is only one way it can be inserted, no force should be applied for this. Another way is to leave the slide inside the housing and insert the cable down the side and into its seat within the throttle slide.



Fig.7

Let the white collar and spring rest inside the housing securing the cable in its place, and then re-position the top cover and screw back into place taking care not to overtighten the screws, Fig.7

NOTE – the weight of the carburetor should now be kept in your hand rather than let it hang from the cable alone.

